



Descaler

A buildup of lime scale in your dish machine, on ware washing racks and surrounding stainless steel is not only unpleasant, lime scale can also cause damage to your kitchen equipment, drive up energy costs and leave a cloudy film on your tableware.



Outstanding performance



Removes hard water deposit
rust and water stains



Sparkling spotless
result



Increase efficiency of heaters



Reduce energy cost



Color coded labelling

Use Instructions:

- Drain wash tank and remove food debris's.
- Turn-off detergent and rinse aid dosing units and fill wash tank with fresh water up to the 3 - 4 cm. below of overflow level.
- Add 30 – 50 gr/L TOPCLIN Descaler and when the wash temperature reaches its normal level run the machine until the lime scale completely disappears.
- Drain wash tank & rinse the entire inner surface of machine.
- Let the TOPCLIN Descaler 3 -5 min. on the surface & then scrub with a proper sponge-pad & rinse with plenty of water.
- **DELMING OF STAINLESS STEEL EQUIPMENT:** Apply undiluted TOPCLIN Descaler with a foam sprayer onto the lime-built up areas. Let the TOPCLIN Descaler 3 -5 min. on the surface and then scrub with a proper sponge-pad and rinse with plenty of water.

Safety Information:

Carefully read the Safety Data Sheet (SDS)
before using this product.

Scan the QR Code to find more information



PACK SIZE

SKU CODE

2 X 5 L

7105109

Contact your local Ecolab Representative

Ecolab MEA Headquarters
PO Box 262015 Dubai
United Arab Emirates

ECOLAB Tem. Sis. Ltd. Şti.
Vizyon Bulvarı, No: 13/65
34870 Kartal / Istanbul

ECOLAB South Africa
1 Ampere Street, Chloorkop
Edden Glen 1613
Johannesburg South Africa

Ecolab Egypt
Postal Code 11835
Cairo Egypt

© Ecolab India, Middle East and Africa. All rights reserved.

Powered by

ECOLAB